

DMC550

*Technical
Reference*

DMC550

Technical Reference

504815-0001 Rev. B
September 2002

SPECTRUM DIGITAL, INC.
12502 Exchange Drive, Suite 440 Stafford, TX. 77477
Tel: 281.494.4505 Fax: 281.494.5310
www.spectrumdigital.com sales@spectrumdigital.com

IMPORTANT NOTICE

Spectrum Digital, Inc. reserves the right to make changes to its products or to discontinue any product or service without notice. Customers are advised to obtain the latest version of relevant information to verify the information being relied on is current, before placing orders.

Spectrum Digital, Inc. warrants performance of its products and related software to current specifications in accordance with Spectrum Digital's standard warranty. Testing and other quality control techniques are utilized to the extent deemed necessary to support this warranty.

Please be aware that the products described herein are not intended for use in life-support appliances, devices, or systems. Spectrum Digital does not warrant nor is liable for the product described herein to be used in other than a laboratory development environment. Use in any other environment voids the warranty.

Spectrum Digital, Inc. assumes no liability for applications assistance, customer product design, software performance, or infringement of patents or services described herein. Nor does Spectrum Digital warrant or represent any license, either express or implied, is granted under any patent right, copyright, or other intellectual property right of Spectrum Digital, Inc. covering or relating to any combination, machine, or process in which such Digital Signal Processing development products or services might be or are used.

WARNING

This equipment is intended for use in a laboratory test environment only. It generates, uses, and can radiate radio frequency energy and has not been tested for compliance with the limits of computing devices pursuant to subpart J of part 15 of FCC rules, designed to provide reasonable protection against radio frequency interference. Operation of this equipment in other environments may cause interference with radio communications. The user, at his own expense, will be required to take whatever measures necessary to correct this interference.

TRADEMARKS

eZdsp is a trademark of Spectrum Digital, Inc.

Contents

1	Introduction to the DMC550	1-1
	<i>Provides a description of the DMC550 module, key features, and board outline.</i>	
1.1	Overview of the DMC550	1-2
1.2	Key Features of the DMC550	1-2
1.3	Functional Overview of the DMC550	1-3
2	Operation of the DMC550	2-1
	<i>Provides a technical description of the DMC550 module, key features, and description of the connectors.</i>	
2.1	Overview of the DMC550 with a DSK	2-2
2.2	Calibrating the DMC550	2-4
2.3	Installation of the DSK on the Digital Motor Controller	2-4
2.2.1	Installation of the DSK using the Serial Interface on the DMC550	2-4
2.2.2	Installation of the DSK using the XDS510PP PLUS	2-5
2.2.3	Installation of the eZdsp LF2407	2-5
2.4	Connecting Motors to the Digital Motor Controller	2-6
2.4.1	Connecting a DC Brushless Motor to the DMC550	2-6
2.5	DMC550 Connectors	2-7
2.5.1	P1, DSK Analog Connector	2-8
2.5.2	P2, DSK Interface Connector	2-9
2.5.3	P3, Motor Interface Connector	2-10
2.5.4	P4, Motor Option Connector	2-10
2.5.5	P5, Encoder Option Connector	2-11
2.5.6	P6, Power Input	2-11
2.5.7	P7, PWM DAC Output	2-11
2.6	Jumpers	2-12
2.6.1	JP1, Voltage Sense U	2-14
2.6.2	JP2, Voltage Sense Bus	2-14
2.6.3	JP3, Voltage Offset Phase U	2-14
2.6.4	JP4, Capture 2/Hall Effect 2	2-14
2.6.5	JP5, Capture 2/Hall Effect 1	2-15
2.6.6	JP6, Capture 3/Hall Effect 3	2-15
2.6.7	JP7, Voltage Control	2-15
2.6.8	JP8, Voltage Sense V	2-15
2.6.9	JP9, Voltage Sense W	2-16
2.6.10	JP10, Current Offset Phase V	2-16
2.6.11	JP11, Current Offset Bus	2-16
2.6.12	JP12, I Sense Bus Shorting Plug	2-16
2.6.13	JP13, VIO, Voltage Range Select	2-16
2.6.14	JP14, Voltage Control (Pot or P4)	2-17

2.7	A/D Channel Configuration	2-17
2.8	Test Points	2-17
2.9	Potentiometer	2-19
2.10	Switches	2-19
2.11	Phase Current	2-20
2.12	Phase Voltage	2-21
A	DMC550 Schematics	A-1
	<i>Contains schematics for the DMC550</i>	
B	DMC550 Mechanicals	B-1
	<i>Contains dimensions for the DMC550</i>	

About This Manual

This manual details the board level operations of the DMC550. This Digital Motor Controller module is designed to be used with the F240, F243, LF2407 DSP Starter Kits (DSK) and eZdsp LF2407A supplied by Spectrum Digital.

The F240, F243, LF2407 DSKs or eZdsp LF2407A and the DMC550, form a table top motor development system allowing engineers and software developers to evaluate certain characteristics of the TMS320F240, TMS320F243, and TMS320LF2407 DSPs to determine if the processor meets the designers application requirements. Evaluators can create software to execute on board or expand the system in a variety of ways.

Notational Conventions

This document uses the following conventions.

The F240, F243, or LF2407 DSK will sometimes be referred to as the DSK.
The eZdsp LF2407A will sometimes be referred to as the eZdsp.
Both DSKs and eZdps will sometimes be referred to as targets.

The DMC550 will sometimes be referred to as the DMC.

Program listings, program examples, and interactive displays are shown in a special italic typeface. Here is a sample program listing.

```
equations  
!rd = rw &!strobe;
```

Information About Cautions

This book may contain cautions.

This is an example of a caution statement.

A caution statement describes a situation that could potentially damage your software, or hardware, or other equipment. The information in a caution is provided for your protection. Please read each caution carefully.

Related Documents

Texas Instruments TMS320F240, TMS320LF2407 Users Guide
Texas Instruments TMS320 Fixed Point Assembly Language Users Guide
Texas Instruments TMS320 Fixed Point C Language Users Guide
Texas Instruments TMS320 Fixed Point C Source Debugger Users Guide
Spectrum Digital F240, F243, LF2407 DSK Technical Reference
Spectrum Digital eZdsp LF2407A Technical Reference

Chapter 1

Introduction to the DMC550

This chapter provides a description of the DMC550, used with the F240, F243, LF2407 DSKs and eZdsp LF2407, key features and circuit board block diagram

Topic	Page
1.0 Overview of the DMC550	1-2
1.1 Key Features of the DMC550	1-2
1.2 Functional Overview of the DMC550	1-3

1.0 Overview of the DMC550

The DMC550 is versatile digital motor controller allowing designers to examine certain characteristics of the TMS320F240, TMS320F243, or TMS320LF2407 Digital Signal Processors (DSPs) to determine if one of these DSPs meets their application requirements. Furthermore, the module is an excellent platform to develop and run motor control software for the TMS320F240, TMS320F243, or TMS320F2407 processor.

The DMC550 uses a F240, F243, LF2407 DSP Starter Kit (DSK) or an eZdsp LF2407 board as the computer engine to run algorithms. The DMC550, along with a DSK or eZdsp, allows full speed verification of F24x/LF24xx code.

Code development for the DMC can be done in two ways;

- Use the serial interface on the DMC with the symbolic assembler and debugger that comes with the DSK
- Use the XDS510PP PLUS JTAG emulator with the compiler/assembler/linker and Code Composer from Texas Instruments.
- Use the eZdsp LF2407 with its on board JTAG emulator with the compiler/assembler/linker and Code Composer from Texas Instruments.

1.1 Key Features of the DMC550


The DMC550 has the following features:

- Compatible with the F240, F243, or LF2407 DSK from Spectrum Digital
- Compatible with the eZdsp LF2407 from Spectrum Digital
- Allows development of algorithms for DC Brushless Motors
- Rated for Bus voltages of 24 VDC
- Rated current is 2.5 amps continuous

1.2 Functional Overview of the DMC550

Figure 1-1 shows a block diagram of the basic configuration for the DMC550. The major interfaces of the DMC550 include:

- 3 phase DC Brushless Interface
- Hall effect Sensor Interface
- Phase Voltage Sense
- Phase Current Sense
- Encoder Interface

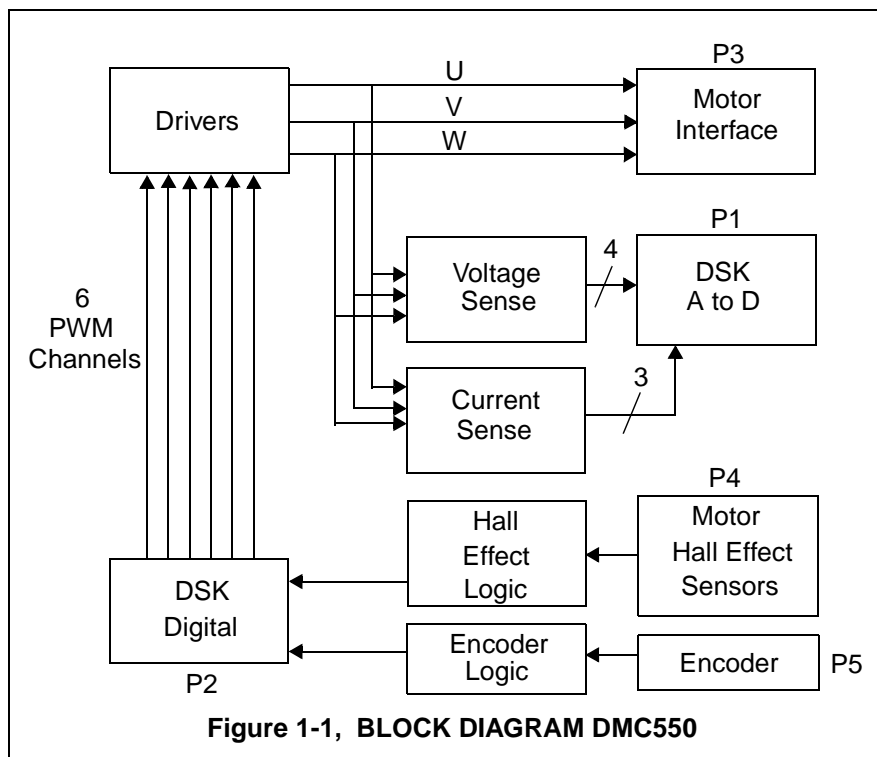

Chapter 2

Operation of the DMC550

This chapter provides a technical description of the DMC550, key features, and description of the connectors.

Topic	Page
2.1 Overview of the DMC550 with a DSK	2-3
2.2 Calibrating the DMC550	2-4
2.3 Installation of the DSK or eZdsp on the DMC550	2-4
2.3.1 Installation of the DSK Using the Serial Interface on the DMC550	2-4
2.3.2 Installation of the DSK Using the XDS510PP PLUS	2-5
2.3.3 Installation of the eZdsp LF2407	2-5
2.4 Connecting Motors to the Digital Motor Controller	2-6
2.4.1 Connecting a DC Brushless Motor to the DMC550	2-6
2.5 DMC550 Connectors	2-7
2.5.1 P1, DSK Analog Connector	2-8
2.5.2 P2, DSK I/O Connector	2-9
2.5.3 P3, Motor Interface Connector	2-10
2.5.4 P4, Motor Option Connector	2-10
2.5.5 P5, Encoder Option Connector	2-11
2.5.6 P6, Power Input	2-11
2.5.6 P7, PWM DAC Output	2-11
2.6 Jumpers	2-12
2.6.1 JP1, Voltage Sense U	2-14
2.6.2 JP2, Voltage Sense Bus	2-14
2.6.3 JP3, Current Offset Phase U	2-14
2.6.4 JP4, Capture 2/ Hall Effect 2	2-14
2.6.5 JP5, Capture 1/ Hall Effect 1	2-15
2.6.6 JP6, Capture 3/ Hall Effect 3	2-15
2.6.7 JP7, Voltage Control	2-15
2.6.8 JP8, Voltage Sense V	2-15
2.6.9 JP9, Voltage Sense W	2-16
2.6.10 JP10, Current Offset Phase V	2-16

Topic	Page
2.6.11 JP11, Current Offset Bus	2-16
2.6.12 JP12, I Sense Bus Shorting Plug	2-16
2.6.13 JP13, VIO, Voltage Range Select	2-16
2.6.14 JP14, Voltage Control (Pot or P4)	2-17
2.7 A/D Channel Configuration	2-17
2.8 Test Points	2-17
2.9 Potentiometer	2-19
2.10 Switches	2-19
2.11 Phase Current	2-20
2.12 Phase Voltage	2-21

2.1 Overview of the DMC550 with a DSK

The DMC550 is the power stage of a Digital Motor Controller development system.

The computing engine for the DMC550 is either a F240 DSK (#701023), a F243 DSK (#701024), an LF2407 DSK (#701025), or eZdsp LF2407 (701119) from Spectrum Digital. The DMC550 allows development to be done with DC Brushless motors.

A board outline of the DMC550 is shown below.

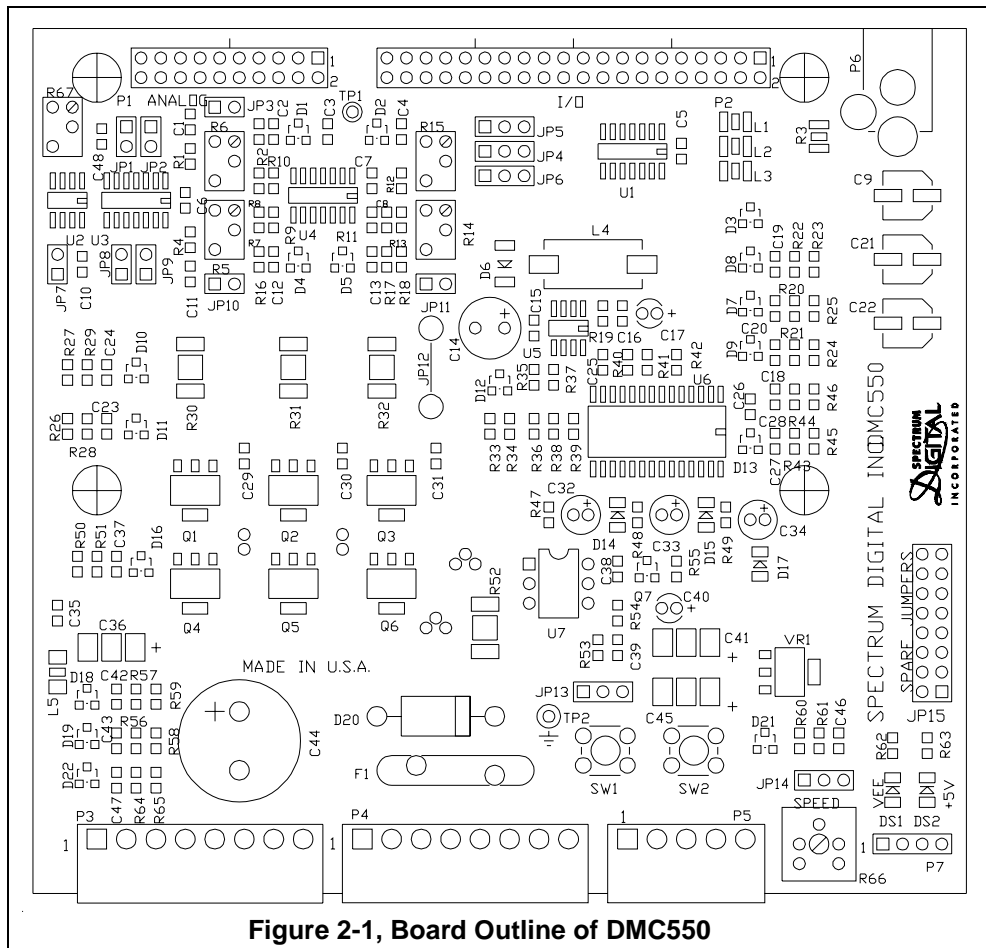


Figure 2-1, Board Outline of DMC550

2.2 Calibrating the DMC550

To get accurate readings from the DMC550 it is wise to calibrate the electronics on the DMC550 prior to using it.

WARNING !

VIO must be selected to either +3.3 volts or +5 volts prior to connecting the DSK or eZdsp

2.3 Installation of the DSK or eZdsp on the DMC550

The F240, F243, LF2407 DSK or eZdsp LF2407 is the computing engine of the DMC550 system. The DSK or eZdsp must be installed on the DMC550 by plugging the DSK into matching connectors. There are three ways to develop and debug algorithms for the DMC550:

- Use the serial interface on the DMC550 with the symbolic assembler and debugger that comes with the DSK
- Use the XDS510PP PLUS JTAG emulator from Spectrum Digital with a DSK along with the compiler/assembler/linker and Code Composer from Texas Instruments.
- Use the eZdsp LF2407 from Spectrum Digital, with the compiler/assembler/linker and Code Composer from Texas Instruments.

Software can be developed using the symbolic assembler and debugger included with the DSK. This allows the engineer to generate algorithms and load them into RAM memory on the DSK. The DSK communicates to the debugger on the host PC via the RS-232 serial port.

Using the XDS510PP PLUS JTAG emulator allows the engineer to debug algorithms with the JTAG interface on the DSK.

Engineers can also develop algorithms using the eZdsp LF2407 with its on board JTAG interface.

2.3.1 Installation of the DSK using the Serial Interface on the DMC550

To install the DSK on the DMC550 for serial debug, perform the following procedure:

1. Remove all power from the DMC550
2. Remove all power from the DSK.
3. Install connectors on the bottom of the DSK by soldering double row box connectors into connectors P1 (analog) and P2 (I/O).
4. Plug the DSK on to the DMC550 by aligning DSK connectors P1 and P2 with DMC550 connectors P1 and P2 respectively and pushing downward.

2.3.2 Installation of the DSK Using the XDS510PP PLUS

To install the DSK on the DMC550 for JTAG debug, perform the following procedure:

1. Remove all power from the DMC550
2. Remove all power from the DSK.
3. Install connectors on the bottom of the DSK by soldering double row box connectors into connectors P1 (analog) and P2 (I/O).
4. Plug the DSK on to the DMC550 by aligning DSK connectors P1 and P2 with DMC550 connectors P1 and P2 respectively and pushing downward.
5. Remove power from the XDS510PP PLUS emulator and attach the JTAG tail to the JTAG connector on the DSK.

2.3.3 Installation of the eZdsp LF2407

To install the eZdsp LF2407 on the DMC550 for JTAG debug, perform the following procedure:

1. Remove all power from the DMC550
2. Remove all power from the eZdsp.
3. Install connectors on the bottom of the eZdsp by soldering double row box connectors into connectors P1 (analog) and P2 (I/O).
4. Plug the eZdsp on to the DMC550 by aligning connectors P1 and P2 with DMC550 connectors P1 and P2 respectively and pushing downward.

2.4 Connecting Motors to the Digital Motor Controller


The DMC550 will support the development of algorithms for a variety of motors. Each type of motor requires a specific type of connection. These connections are discussed in the following sections.

2.4.1 Connecting a DC Brushless Motor to the DMC550

To connect a DC brushless motor to the DMC550 perform the following steps:

1. Remove all power from the DMC550
2. Attach Phase U from the motor to connector P3-6.
3. Attach Phase V from the motor to connector P3-7.
4. Attach Phase W from the motor to connector P3-8.
5. Attach +5 volts to the Hall Effect Sensor from connector P3-7.
6. Attach Hall Effect 1 from the motor to connector P3-2.
7. Attach Hall Effect 2 from the motor to connector P3-3.
8. Attach Hall Effect 3 from the motor to connector P3-4.
9. Attach Hall Effect ground from the motor to connector P3-1.
10. Attach Power Bus Pins 3 and 4 (3 is Bus Power Input, 4 is ground)

These connections are shown in the figure below.

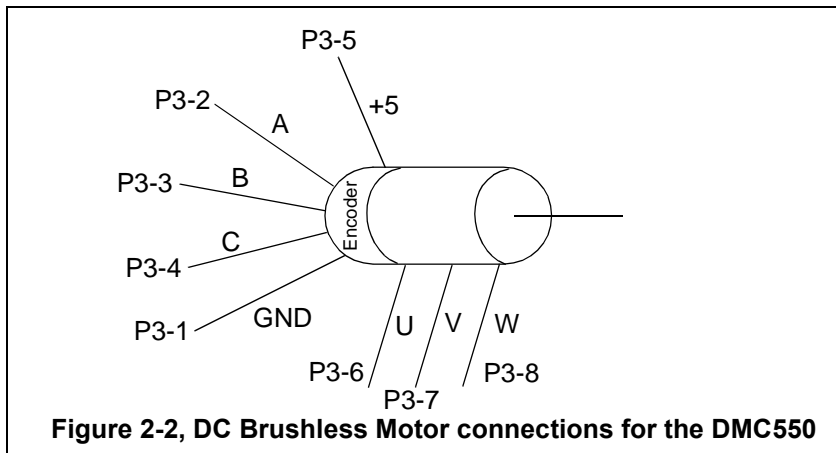

2.5 DMC550 Connectors

The DMC550 has 7 connectors. These connectors are used to bring power to the DMC550, signals to/from the DSK, and power to the motor. These connectors are shown in the table below and discussed in the following sections.

Table 1: DMC550 Connectors

Connector	# Pins	Function
P1	20 (2 x 10)	DSK Analog Connector
P2	40 (2 x 20)	DSK I/O Connector
P3	8 (1 x 8)	Motor Interface Connector
P4	8 (1 x 8)	Motor Power Connector
P5	5 (1 x 5)	Encoder Option Connector
P6	3	+5 Volt Power Input (optional)
P7	4	PWM DAC Channels (LF2407 only)

The position of each connector on the DMC550 is shown in the figure below.

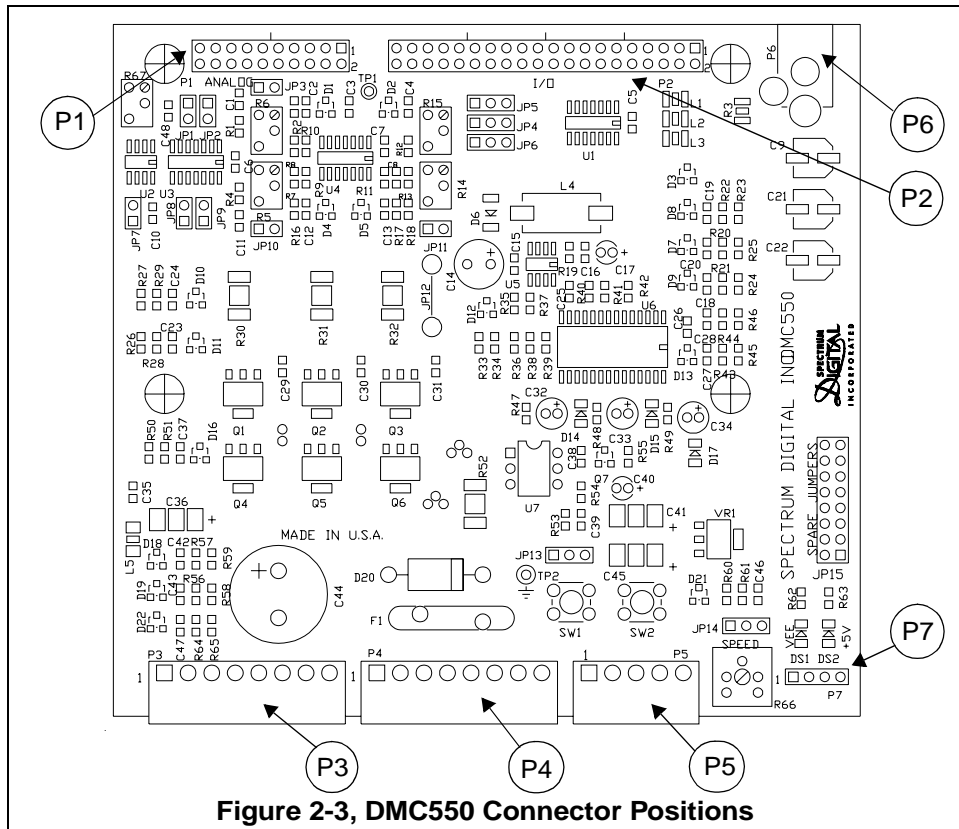


Figure 2-3, DMC550 Connector Positions

2.5.1 P1, DSK Analog Connector

Connector P1 provides the analog signal interface to the DSK attached to the DMC550. The signals on this connector are defined in the table below:

Table 2: P1, Analog Interface

Pin #	Signal	Pin #	Signal
1	GND	2	ADC0
3	GND	4	ADC1
5	GND	6	ADC2
7	GND	8	ADC3
9	GND	10	ADC4
11	GND	12	ADC5
13	GND	14	ADC6
15	GND	16	ADC7
17	GND	18	RESERVED
19	GND	20	RESERVED

2.5.2 P2, DSK I/O Connector

Connector P2 provides the analog signal interface to the DSK plugged onto the DMC550. The signals on this connector are defined in the table below

Table 3: P2, DSK I/O Connector

Pin #	Signal	Pin #	Signal
1	+5 Volts	2	+5 Volts
3	Reserved	4	Reserved
5	In1	6	Cap1
7	Cap2	8	Cap3
9	Pwm1	10	Pwm2
11	Pwm3	12	Pwm4
13	Pwm5	14	Pwm6
15		16	
17	Enable-	18	
19	Gnd	20	Gnd
21	Reserved	22	In2
23	Reserved	24	Reserved
25	Reserved	26	Reserved
27	Reserved	28	Reserved
29	Reserved	30	Reserved
31	Reserved	32	Reserved
33	Hall Effect 1	34	Hall Effect 2
35	Hall Effect 3	36	Reserved
37	Fault	38	Reserved
39	Gnd	40	Gnd

2.5.3 P3, Motor Interface Connector

Connector P3 provides the Motor Driver Phases and hall Effect feedback interface which plug onto the DMC550. The signals on this connector are defined in the table below:

Table 4: P3, Motor Interface Connector

Pin #	Signal
1	GND
2	HALL1
3	HALL2
4	HALL3
5	+5 VDC
6	Motor U+
7	Motor V+
8	Motor W+

For convenience, these signal names are printed on the bottom side of the board.

2.5.4 P4, Motor Option Connector

Connector P4 provides the Motor input power, Analog speed input and option inputs which plug onto the DMC550. The signals on this connector are defined in the table below:

Table 5: P4, Motor Option Connector

Pin #	Signal
1	BUS- (GND)
2	BUS+
3	Bus Input Voltage
4	GND
5	VCONTROL (0-5V Analog)
6	IN2 (0-5V Digital)
7	IN1 (0-5V Digital)
8	+5 VDC

2.5.5 P5, Encoder Option Connector

Connector P5 provides the encoder interface to the DMC550. The signals on this connector are defined in the table below:

Table 6: P5, Encoder Option Connector

Pin #	Signal
1	GND
2	Capture 3 (Index)
3	Capture 1 (Channel A)
4	Vsensor (5 VDC)
5	Capture 2 (Channel B)

2.5.6 P6, Power Input

Connector P6 is the +5 Volt power input to power the DMC logic and the target processor (DSK or eZdsp). This input is convenient for powering the DMC550 during calibration.

2.5.6 P7, PWM DAC Output

On the LF2407 DSPs the 3 PWM channels, PWM7, 9, 11 can be used to convert pulse width modulators into DAC output via a 2 pole filter provided. The table below shows the PWM channels and the DAC channels they control.

Table 7: P7, PWM DAC Output

Pin #	DAC Channel	PWM Signal
1	DAC A	PWM 7
2	DAC B	PWM 9
3	DAC C	PWM 11
4	GND	


2.6 Jumpers

The DMC550 has 14 jumpers. Their designator, size, and function are shown in the table below:

Table 8: DMC550 Jumpers

Jumper #	Size	Function
JP1	1 x 2	Voltage Sense U
JP2	1 x 2	Voltage Sense Bus
JP3	1 x 2	Current Offset Phase U
JP4	1 x 3	Capture 2/Hall Effect 2
JP5	1 x 3	Capture 1/Hall Effect 1
JP6	1 x 3	Capture 3/Hall Effect 3
JP7	1 x 2	Voltage Control
JP8	1 x 2	Voltage Sense V
JP9	1 x 2	Voltage Sense W
JP10	1 x 2	Current Offset Phase V
JP11	1 x 2	Current Offset
JP12	1 x 2	I Sense Bus Shorting Plug
JP13	1 x 3	VIO, Voltage Range Select
JP14	1 x 3	Voltage control (Pot or P4)

The position of each jumper on the DMC550 is shown in the figure below.

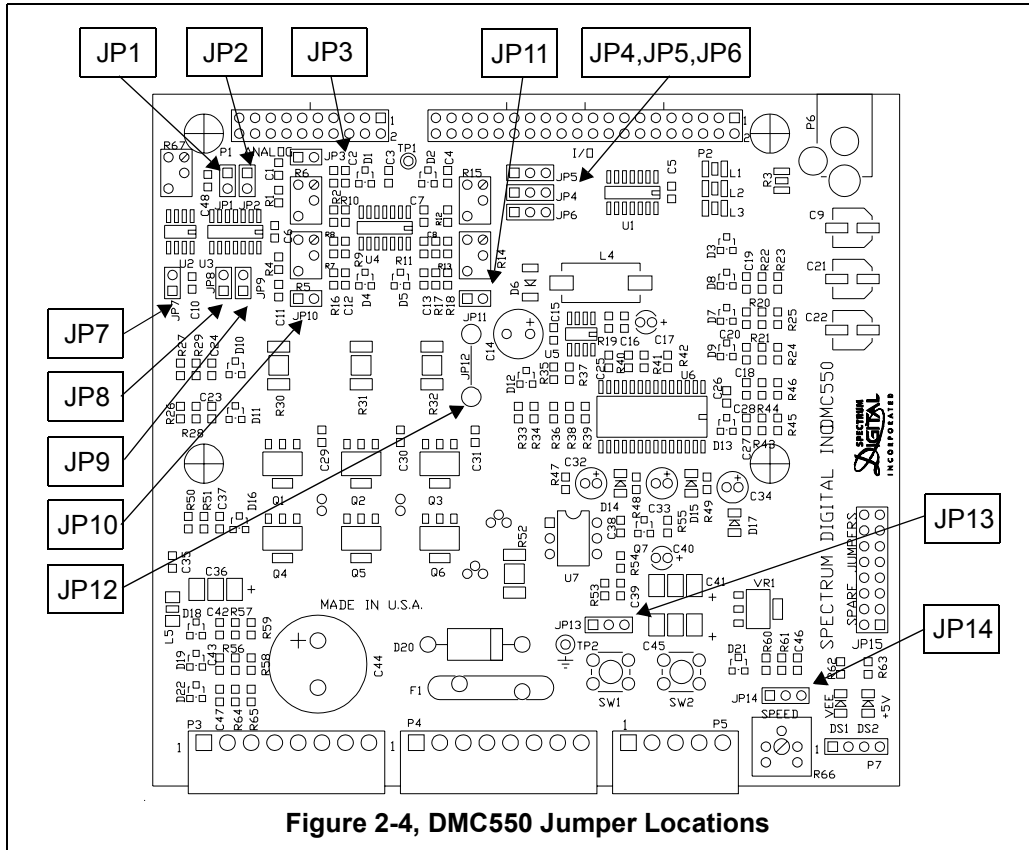

DANGER !

Remove all power to the unit, motors, and associated electronics when connecting/disconnecting jumpers, wires, or connectors.

2.6.1 JP1, Voltage Sense U

Jumper JP1 is used to aid in setup for debugging. When the jumper is inserted a known voltage can be provided to the A/D via the potentiometer R67.

Normal operation is to remove this jumper.

2.6.2 JP2, Voltage Sense Bus

Jumper JP2 is used to aid in setup for debugging. When the jumper is inserted a known voltage can be provided to the A/D via the potentiometer R67.

Normal operation is to remove this jumper.

2.6.3 JP3, Current Offset Phase U

Jumper JP2 is used to select an offset for the current. The potentiometer R15 can be used to add an offset to the current sense.

2.6.4 JP4, Capture 2/ Hall Effect 2

Jumper JP4 is used to select an optical encoder or hall Effect sensor to DSK capture channel. In the 1-2 position the Hall Effect sensor is mapped to the DSK capture channel 2. When the 2-3 selection is used the encoder is mapped to the capture channel 2. The setting are shown in the table below.

Table 9: JP4, Capture2/Hall Effect 2

Position	Function
1-2	Hall Effect mapped to Capture 2
2-3	Encoder mapped to Capture 2

2.6.5 JP5, Capture 1/ Hall Effect 1

Jumper JP5 is used to select an optical encoder or hall Effect sensor to DSK capture channel. In the 1-2 position the Hall Effect sensor is mapped to the DSK capture channel 1. When the 2-3 selection is used the encoder is mapped to the capture channel 1. The setting are shown in the table below.

Table 10: JP5, Capture1/Hall Effect 1

Position	Function
1-2	Hall Effect mapped to Capture 1
2-3	Encoder mapped to Capture 1

2.6.6 JP6, Capture 3/ Hall Effect 3

Jumper JP6 is used to select an optical encoder or hall Effect sensor to DSK capture channel. In the 1-2 position the Hall Effect sensor is mapped to the DSK capture channel 3. When the 2-3 selection is used the encoder is mapped to the capture channel 3. The setting are shown in the table below.

Table 11: JP6, Capture3/Hall Effect 3

Position	Function
1-2	Hall Effect mapped to Capture 3
2-3	Encoder mapped to Capture 3

2.6.7 JP7, Voltage Control

Jumper JP8 is used to aid in setup for debugging. When the jumper is inserted a known voltage can be provided to the A/D via the potentiometer R67.

Normal operation is to remove this jumper.

2.6.8 JP8, Voltage Sense V

Jumper JP8 is used to aid in setup for debugging. When the jumper is inserted a known voltage can be provided to the A/D via the potentiometer R67.

Normal operation is to remove this jumper.

2.6.9 JP9, Voltage Sense W

Jumper JP8 is used to aid in setup for debugging. When the jumper is inserted a known voltage can be provided to the A/D via the potentiometer R67.

Normal operation is to remove this jumper.

2.6.10 JP10, Current Offset Phase V

Jumper JP10 is used to select an offset for the current. The potentiometer R15 can be used to add an offset to the current sense.

2.6.11 JP11, Current Offset Bus

Jumper JP11 is used to select an offset for the current. The potentiometer R15 can be used to add an offset to the current sense.

2.6.12 JP12, I Sense Bus Shorting Plus

Jumper JP12 is used to short the sensing resistor from **BUSIN-**.

Some algorithms do not use this on leg currents so this allows for only leg current measurements.

2.6.13 JP13, VIO Voltage Range Select

Jumper JP13 is used to select the I/O voltage. In the 1-2 position the logic outputs 0-5 volts. When the 2-3 selection is used the logic outputs 0-3.3 volts. The settings are shown in the table below..

Table 12: JP13, VIO Voltage Range Select

Position	Function
1-2	+5 Volts (TMS320F240/F243)
2-3	+3.3 Volts (TMS320LF2407)

2.6.14 JP14, Voltage Control (Pot or P4)

Jumper JP14 is used to select analog input from either the on board potentiometer R66 or connector P4, pin 5. For example, this input is useful for speed control by application software. In the 1-2 position input is from connector P4, pin 5. When the 2-3 selection is used the onboard pot is selected. The settings are shown in the table below..

Table 13: JP14, Voltage Control

Position	Function
1-2	Connector P4, Pin 5 drives V Control
2-3	Potentiometer R66 controls V Control

2.7 A/D Channel Configuration

The following table shows the input to the A/D channels on the DSP.

Table 14: A/D Channel Configuration

A/D Channel	Input Signal
ADC0	I Sense Phase U
ADC1	I Sense Phase V
ADC2	I Sense Bus
ADC3	V Sense Phase U
ADC4	V Sense Phase V
ADC5	V Sense Phase W
ADC6	V Bus Sense
ADC7	V Control

2.8 Test Points

The DMC550 has 2 test points. The user should use the test point #2 as ground when probing signals with a meter or scope. The signals on each test point are shown in the table below..

Table 15: DMC550 Test Points

Test Point	Signal
TP1	Offset voltage for current channels
TP2	Ground



DANGER !

Remove all power to the unit, motors, and associated electronics when connecting/disconnecting probes, jumpers, wires or connectors.

Warning:

1. Remove all input power to the DMC550 and DSK prior to connecting any probes. LED DS1 should **not** be illuminated.

The positions of the test points, switches, and potentiometer on the DMC550 are shown in the figure below.

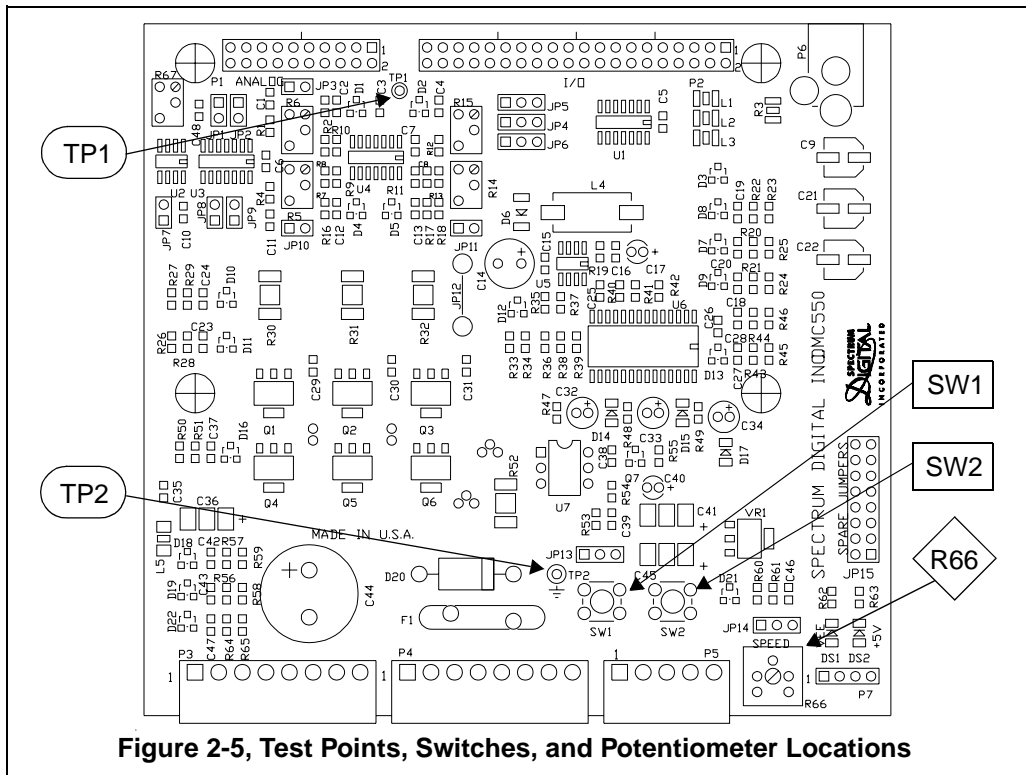


Figure 2-5, Test Points, Switches, and Potentiometer Locations

2.9 Potentiometer

The DMC550 has one potentiometer. This potentiometer provides a mechanism for speed control or other functions in application programs. The range is 0 to +5 volts, or 0 to +3.3 volts depending on the setting of the VIO jumper on the DMC550. The table below shows the potentiometer designator, its function, and range of adjustment:

Table 16: DMC550 Potentiometer

Potentiometer #	Function	Jumper JP13	Adjustment Range
R66	VCONTROL	1-2	0-5 Volts
R66	VCONTROL	2-3	0-3.3 Volts

2.10 Switches

The DMC550 has two push button switches. These switches can be used for user defined functions. Switches SW1 and SW2 can be read on I/O bits of the DSP. These switches are wired in parallel with inputs from connector P4.

The position of these switches are shown in Figure 2-3 on the previous page. The signal used by each switch is shown in the table below.

Table 17: DMC550 Switches

Led #	Signal
SW1	IN1
SW2	IN2

2.11 Phase Current

The DMC550 supports reading the phase current in the lower transistor leg. The currents are measured across three .05 ohm resistors. These sense signals are then filtered for a 40Khz cutoff frequency, clamped to the rails and applied to the non-inverting input of an opamp. For all inputs there is one variable offset voltage adjustment. This allows bipolar current measurements. The gain of each amplifier is adjustable. The example below shows the scaling.

In our example we will use the maximum +/- 2.5 amps. The maximum voltage across the sense resistor would then be:

$$\begin{aligned} V &= I \times R \\ V &= 5.00 \text{ Amps} \times .05 \text{ Ohms} \\ V &= .25 \text{ Volts} \end{aligned}$$


A gain must be selected that will not saturate the ADC on the processor module, yet use the maximum range possible. So if VIO is +5 volts the maximum gain in our example is $5/.25 = 20$. With the gain offset at 20 we now need an offset to have positive and negative current measurements. To achieve mid-scale (+2.5 volts) in our example with no current we have an $V_{\text{offset}} \times \text{Gain} = 2.5$.

$$2.5/20 = 0.125 \text{ volts for } V_{\text{offset}}$$

At maximum current (2.5 amps) the output is:

$$\begin{aligned} V_{\text{output}} &= (V_{\text{offset}} + V_{\text{input}}) \times \text{Gain} \\ &= (.125 + (2.5 \times .05)) \times 20 \\ &= 5 \text{ volts} \end{aligned}$$


The graph below shows current vs. voltage for our example:

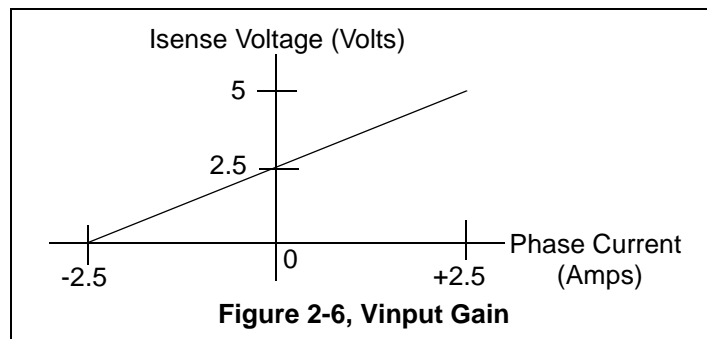

2.12 Phase Voltage

The phase voltages are measured from the top transistor with respect to Bus-. Each phase is divided by a resistive divider consisting of 6.49K and 1.00K. This gives a division of 7.5. In our example we will assume a maximum voltage of 24 volts.


At maximum voltage $V_{sense} = 24/7.5 = 3.2$ volts. See graph below.

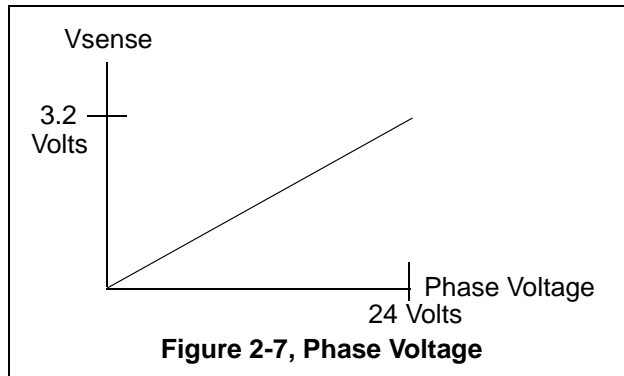

Appendix A


DMC550 Schematics


This appendix contains the schematics for the DMC550. The schematics were drawn on ORCAD.

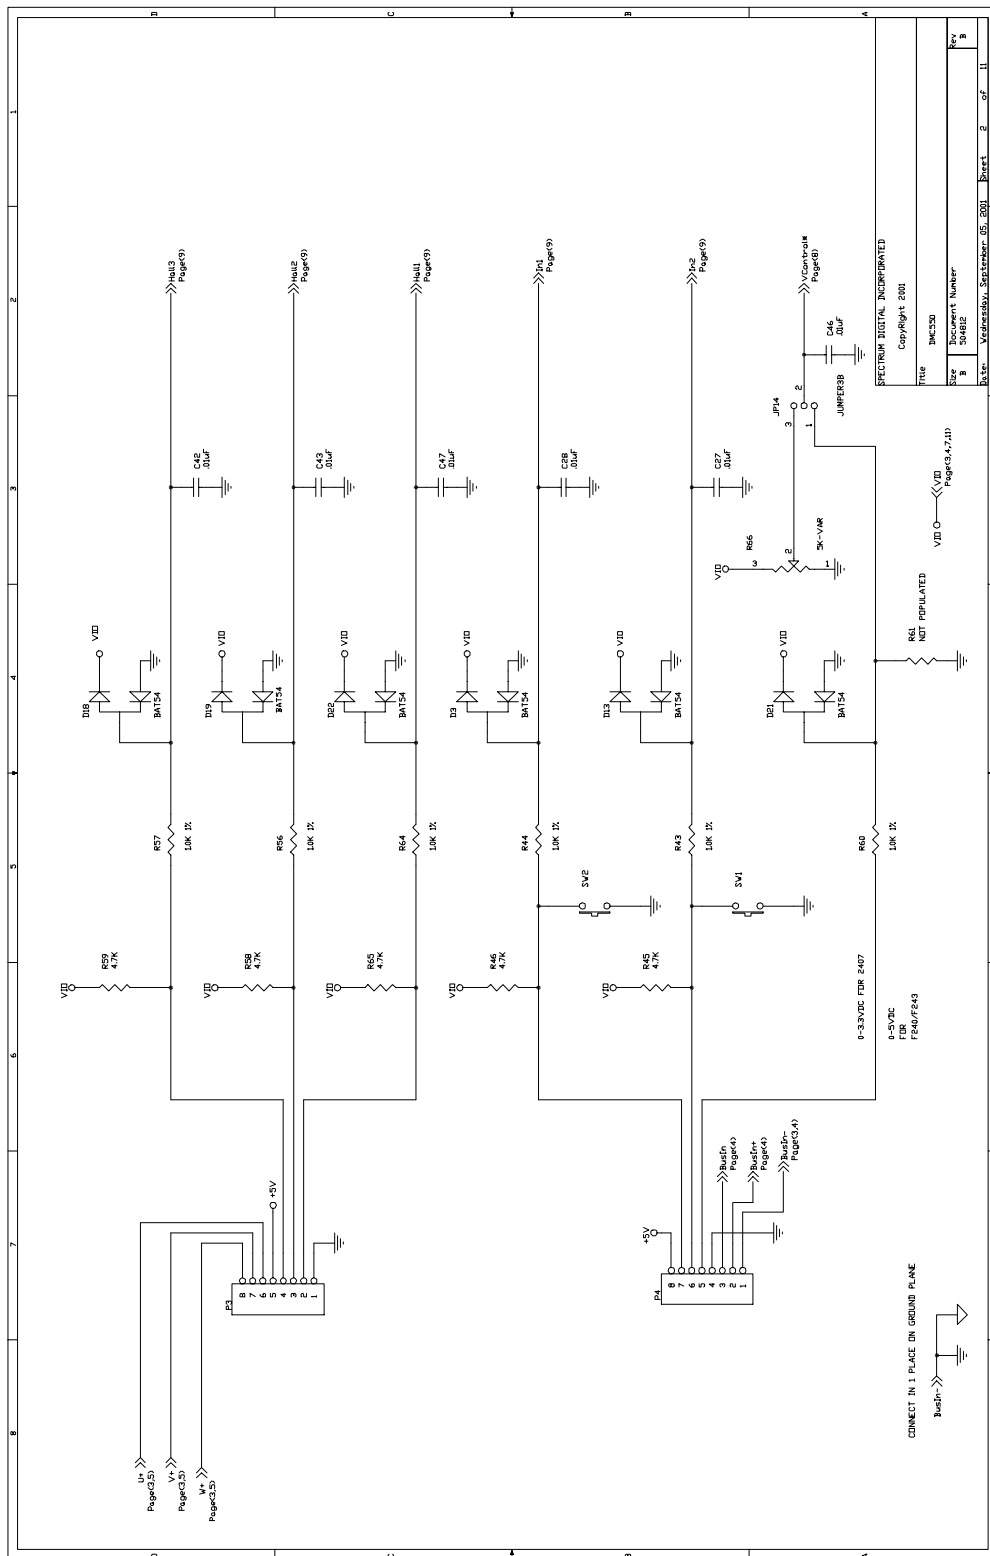

CONNECT IN 1 PLACE ON GROUND PLANE


SPECTRUM DIGITAL, INCORPORATED
 Copyright 2001
 TITLE: BMC230
 SIZE: B
 DOCUMENT NUMBER: 304612
 DATE: Wednesday, September 05, 2001
 SHEET: 2 of 11

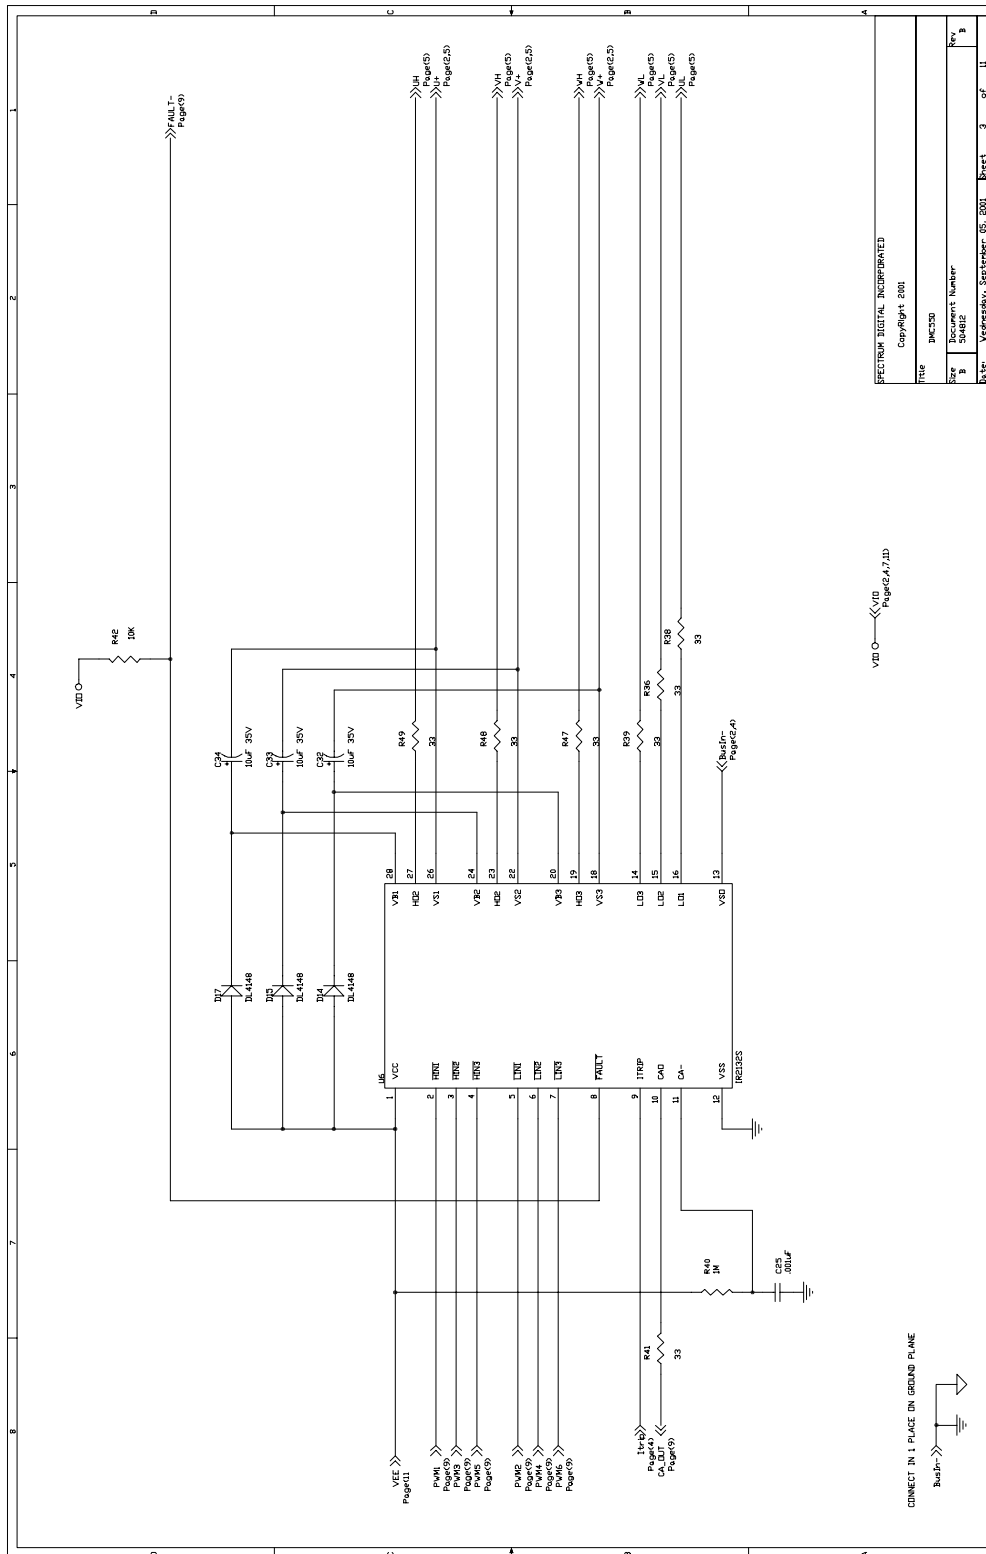

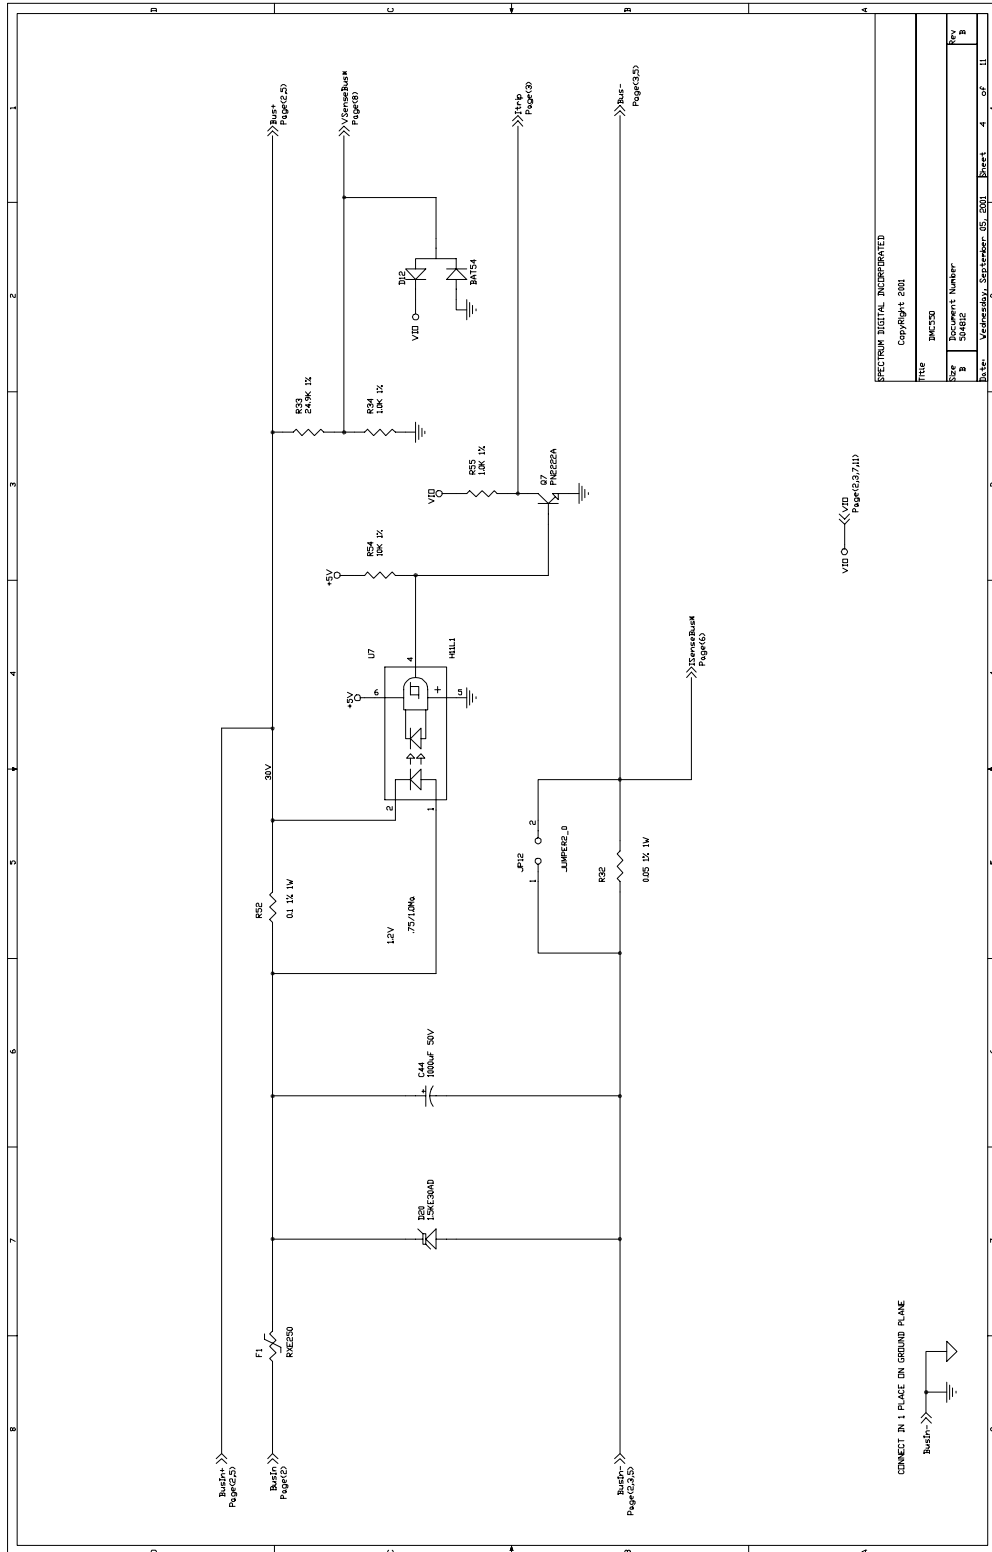

SPECTRUM DIGITAL, INCORPORATED			
Copyright 2001			
TITLE	PMC200		
SIZE	Sheet Number		
B	304412		
DATE	Wednesday, September 05, 2001	Sheet	4 of 11

CONNECT IN 1 PLACE ON GROUND PLANE

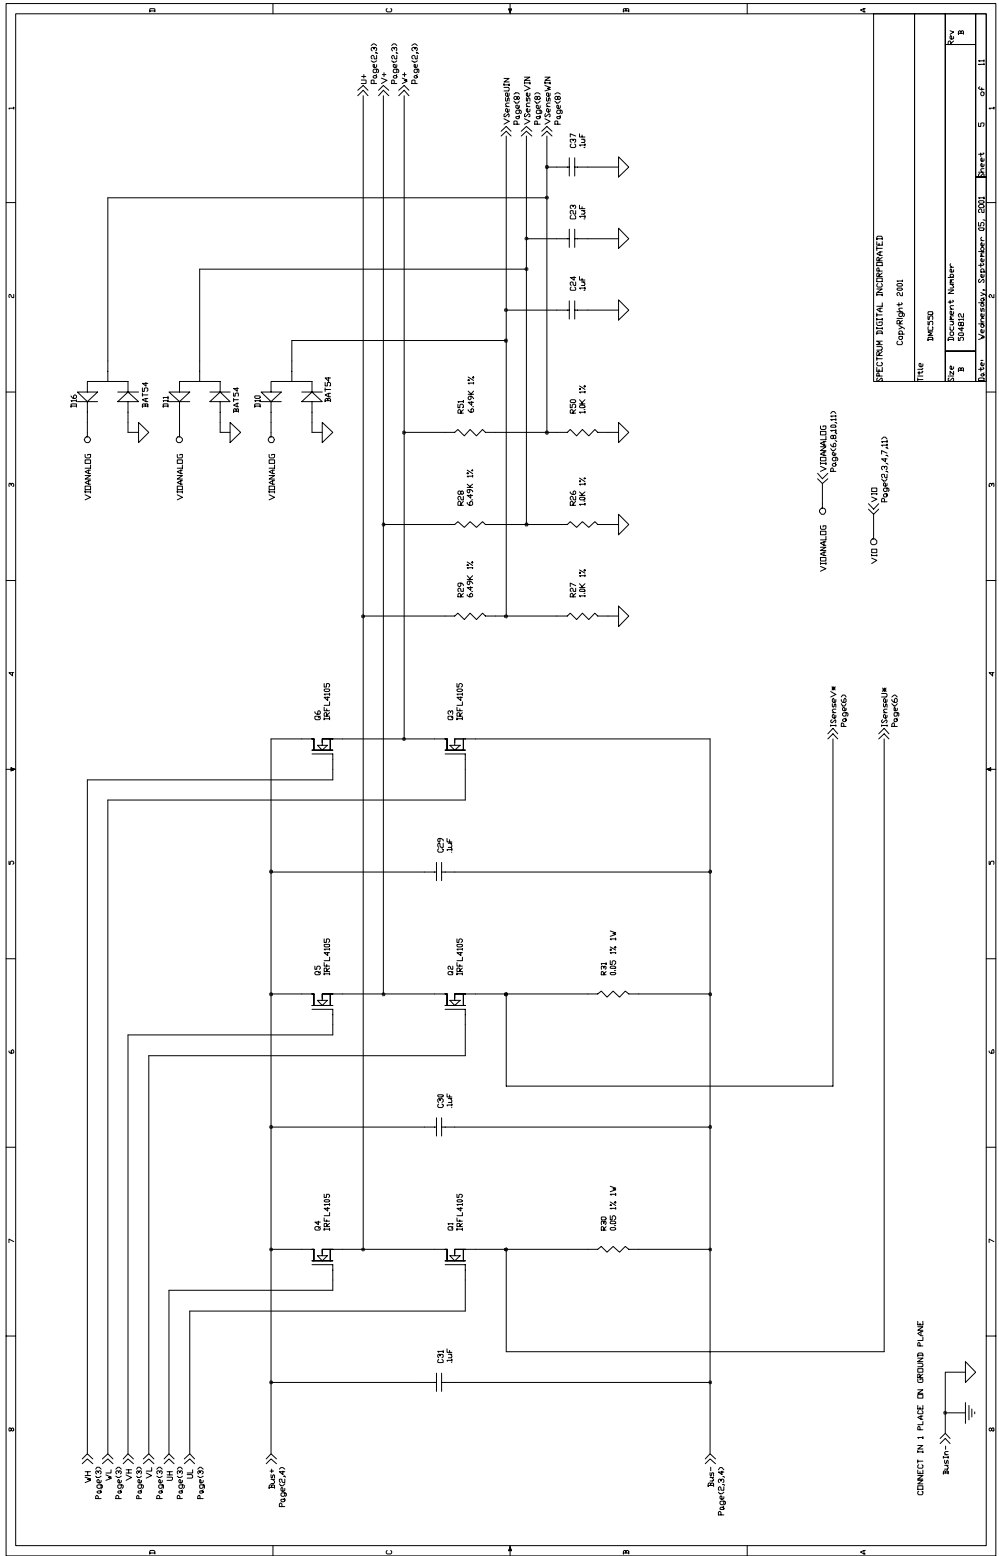


SPECTRUM DIGITAL, INCORPORATED	
Copyright 2001	
Title	DMC550
Size	Document Number
B	504812
Rev	B
Sheet	5 of 11
Issue	Verobsky, September 05, 2001

VIDA ANALOG
Page 6.8.15.11


VID O
Page 6.3.4.7.11

BusIn-
Page 6.8


CONNECT IN PLACE ON GROUND PLANE
BusIn-
Page 6.8

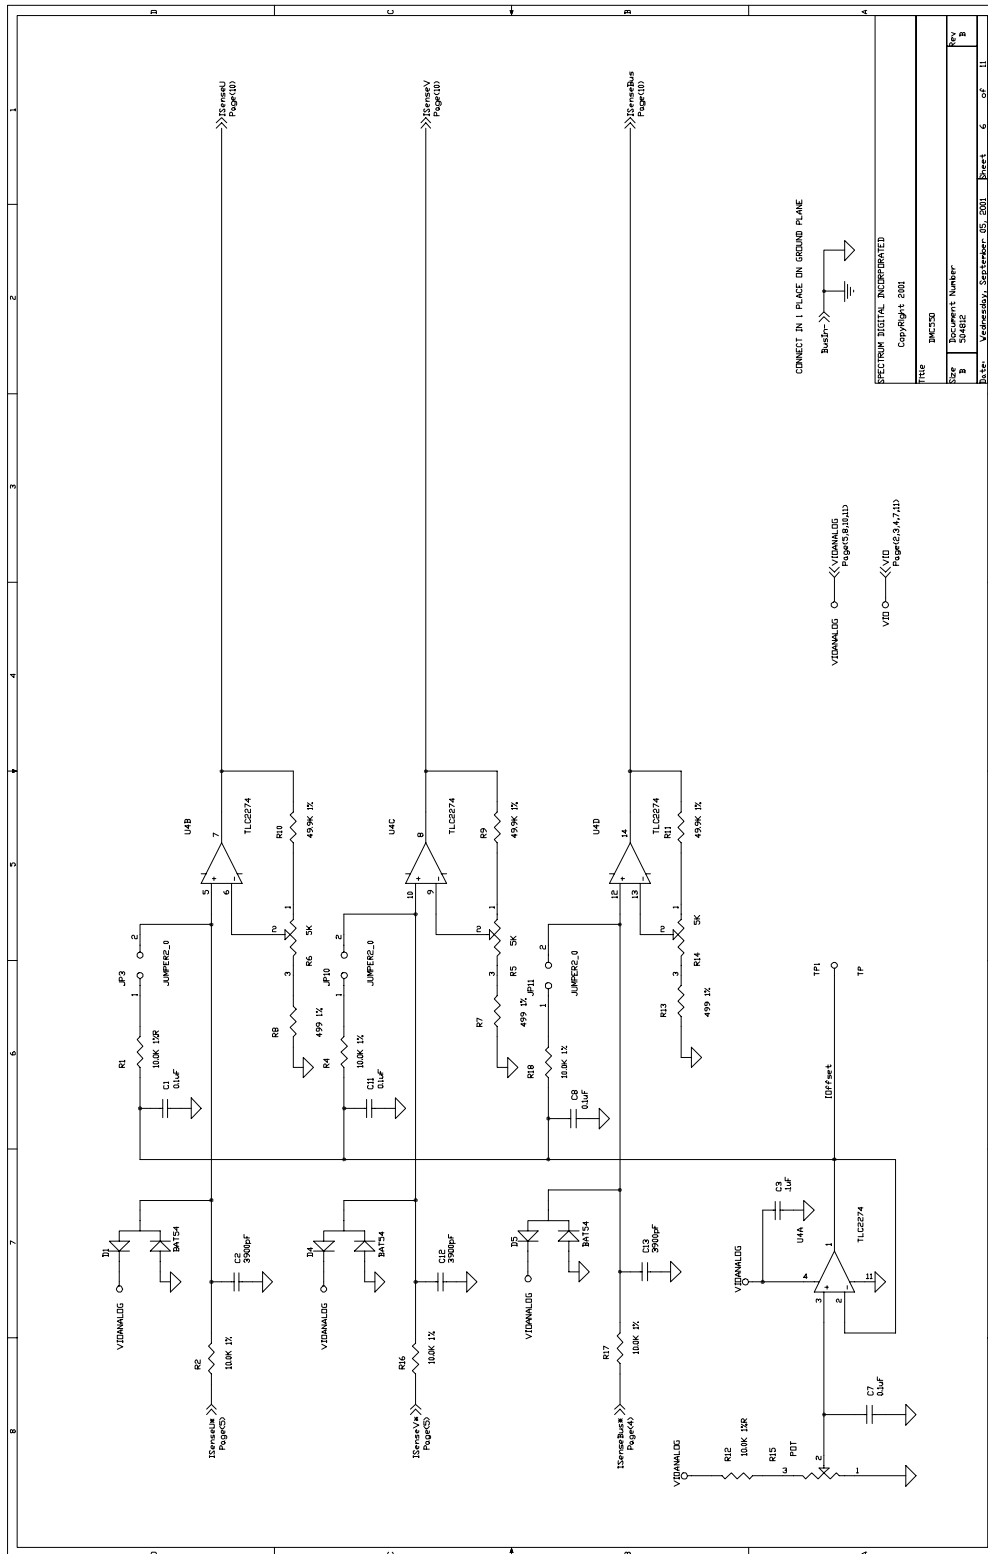



REV	1	DATE	05/2000
REV	2	DATE	05/2000
REV	3	DATE	05/2000
REV	4	DATE	05/2000
REV	5	DATE	05/2000
REV	6	DATE	05/2000
REV	7	DATE	05/2000
REV	8	DATE	05/2000
REV	9	DATE	05/2000
REV	10	DATE	05/2000
REV	11	DATE	05/2000

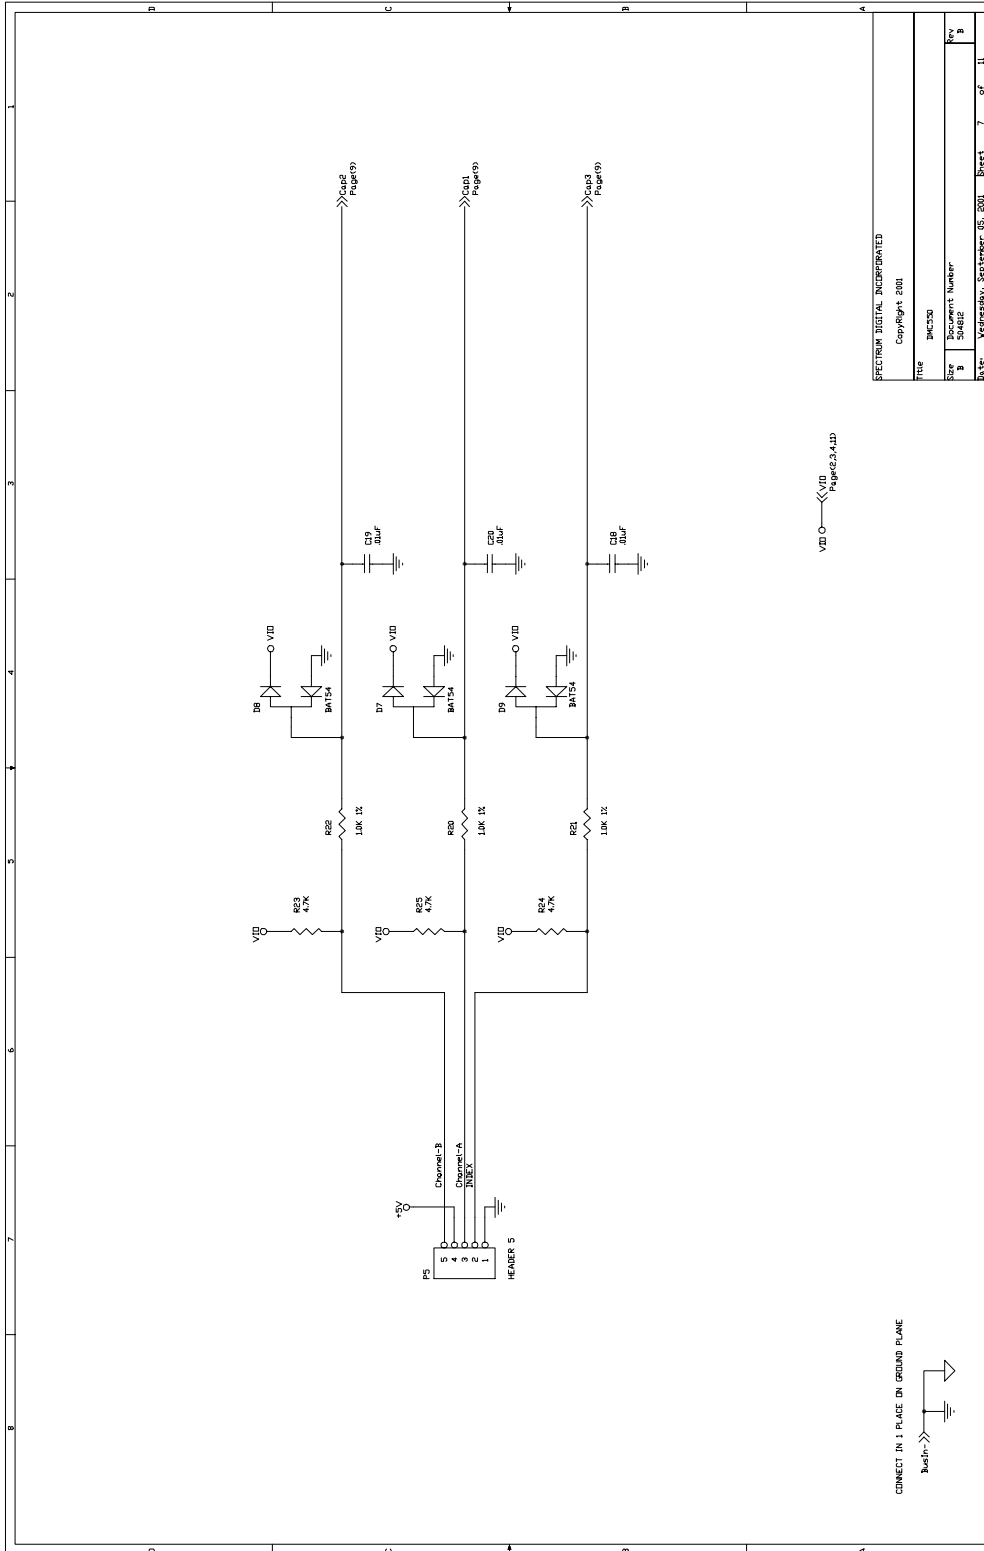


SPECTRUM DIGITAL, INCORPORATED	
Copyright 2001	
TITLE	DMC550
SIZE	Document Number
REV	B
DATE	Wednesday, September 05, 2001
SHEET	7 of 11

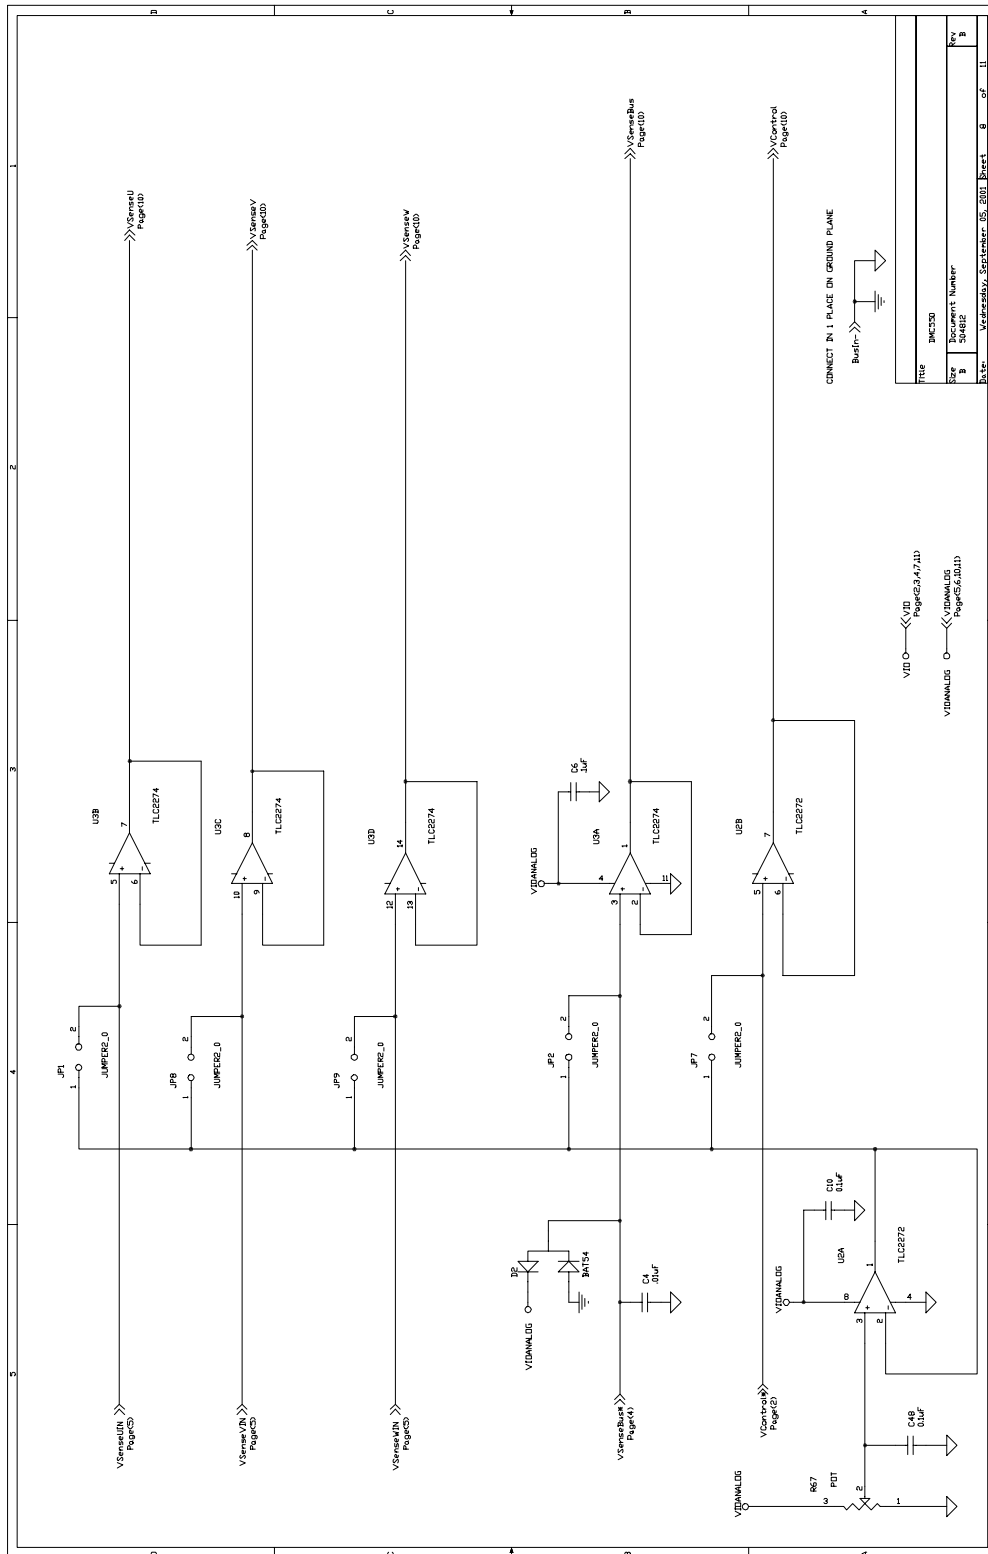

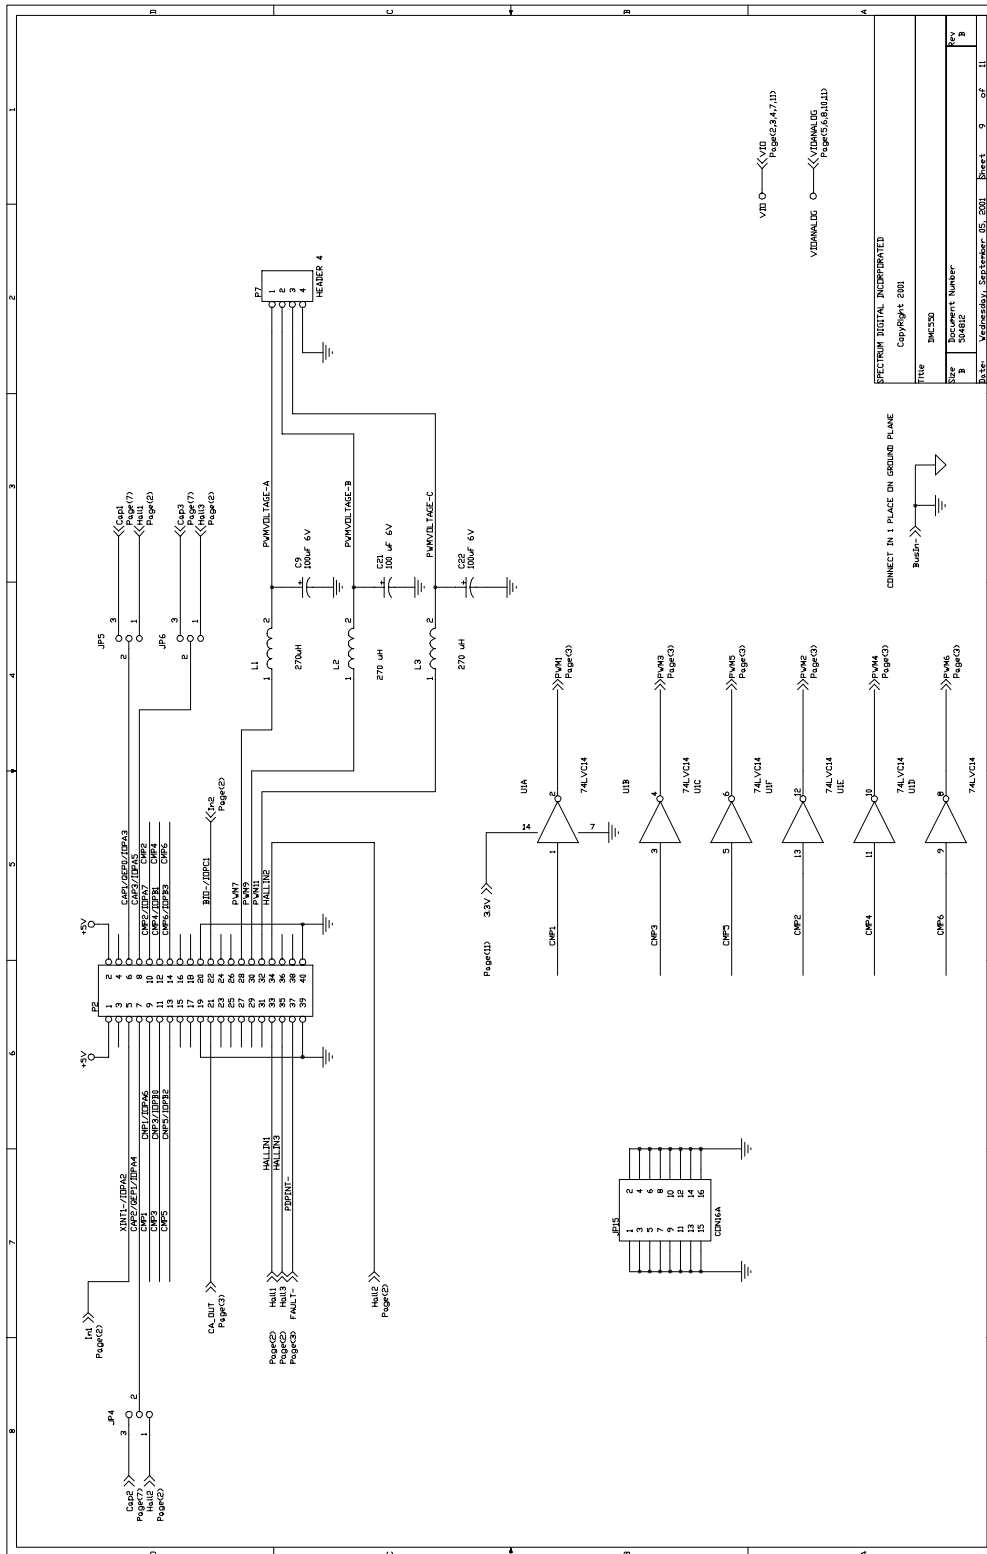

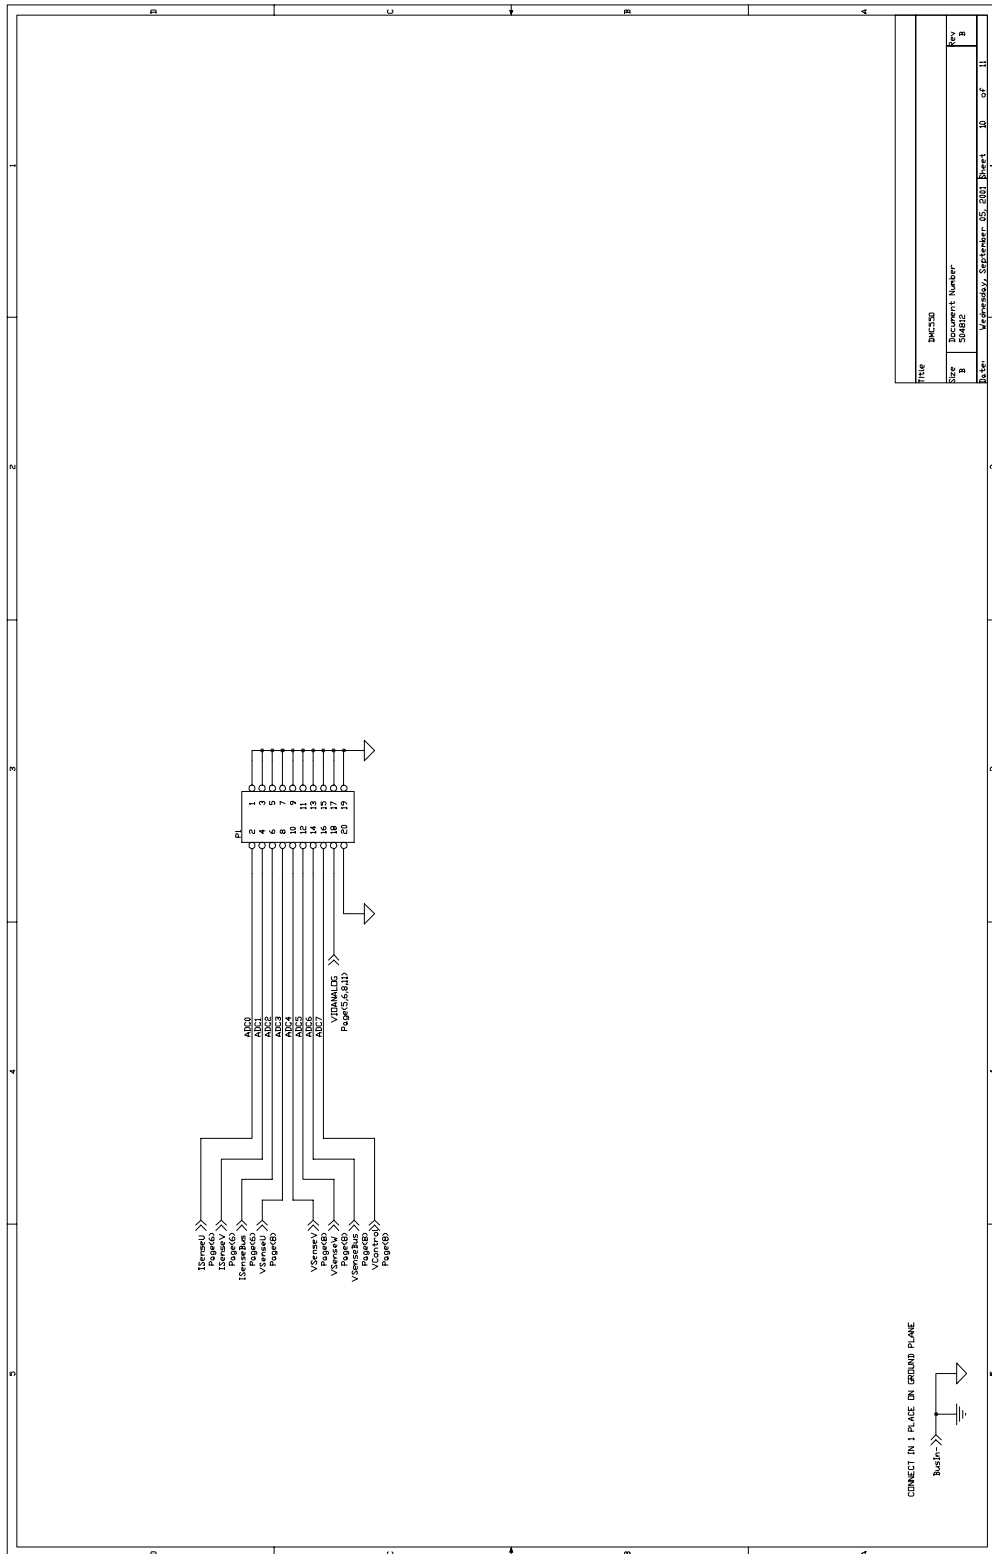

TYPE	IMC350
SIZE	Document Number
REV	504812
DATE	Wednesday, September 05, 2001 8:21:11 AM

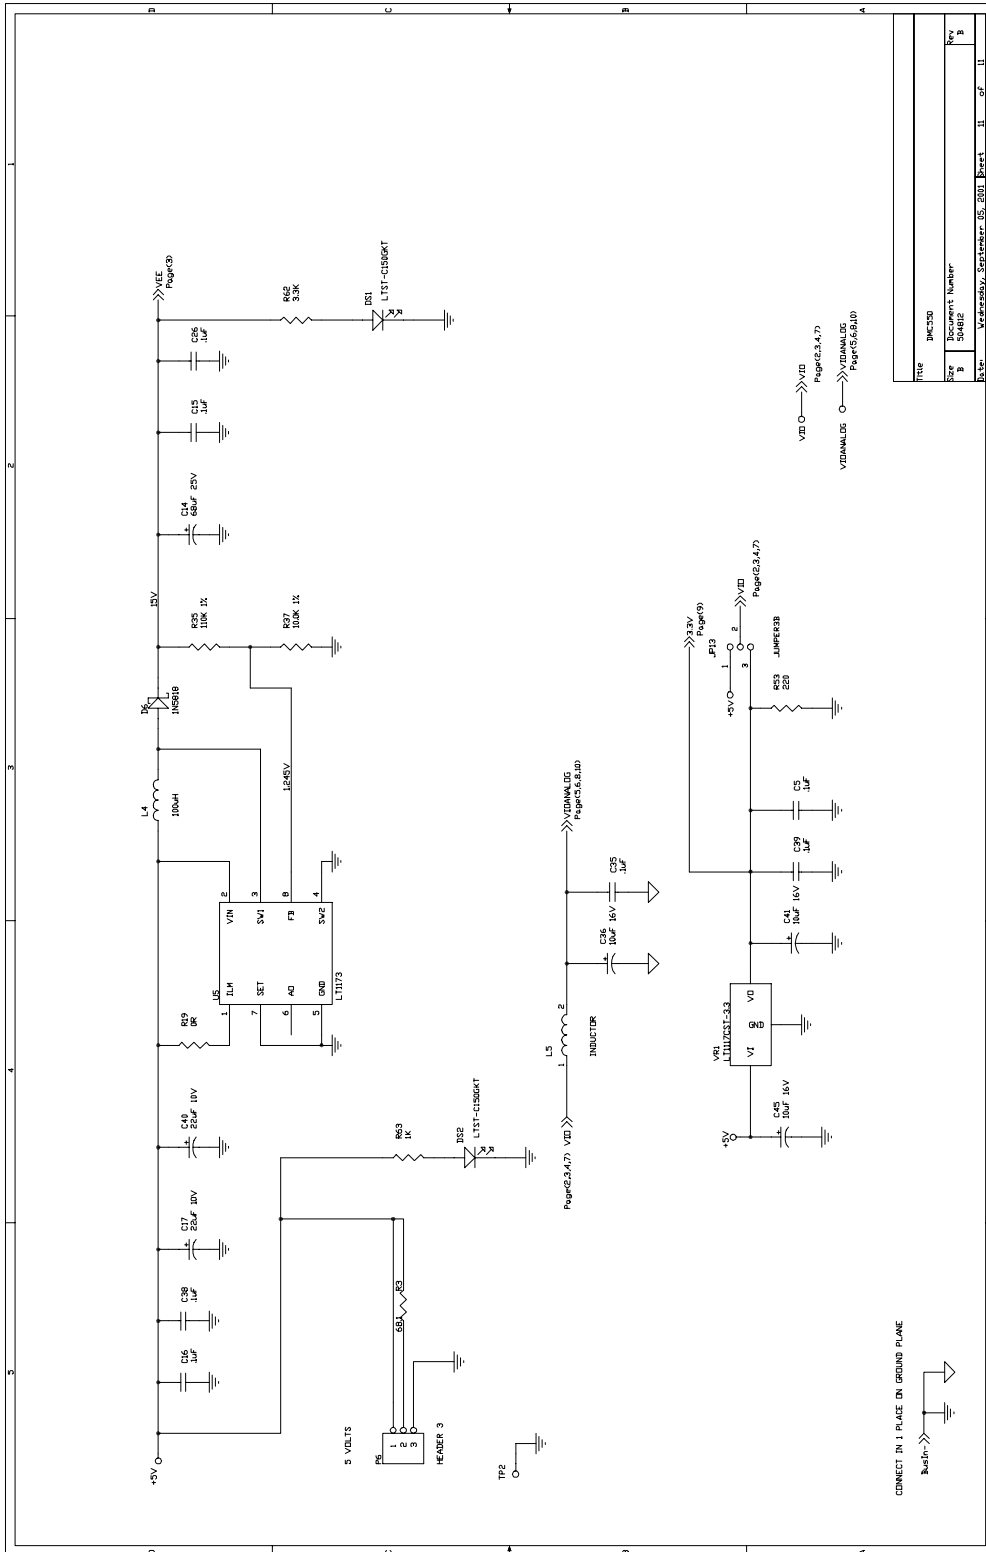

Appendix B

DMC550 Mechanicals



This appendix contains the mechanical dimensions for the DMC550.

